



Frolight Control Units and IR tubes

User Manual. EU GB



FROLIGHT
S Y S T E M S

Congratulations on becoming a proud owner of the Frolight System!

We are happy to welcome you to the Frolight family and thank you for choosing our product.

Frolight is a revolutionary solution designed to protect your crops from damage caused by spring frost. Our **advanced infrared lighting technology** works to raise the temperature inside of the plants and provide optimal growing conditions for your plants. This innovative system allows you to increase your yields and maintain the quality of your crops, ensuring that your plantation can produce the best fruits possible.

Frolight is an easy-to-use, reliable solution that can provide you with the protection you need to keep your crop fields in top condition. The manual is designed to guide you through the setup, operation, and maintenance of your Frolight system, so that you can start seeing the benefits of healthier, more productive vines as soon as possible.

We hope that you will find the user manual informative and easy to understand.

Enjoy your Frolight!

Table of Contents

Table of Contents	1
General safety warnings & precautions	3
Technical Details	5
Declaration of Conformity	5
EMC environment & installation constraints	6
Product overview	6
Solution overview	6
Parts	7
Installation	12
Unpacking and verifying the components of your system	12
Frolight Control Units	12
Frolight IR tubes	13
Installation schema	13
Preparing your environment for installation	14
Step-by-step instructions for installing	14
Required tools and equipment	14
Installing the Control Units	14
Installing the IR tubes	17
Connecting the IR tubes to the Control Units	19
Connecting the Control Units to the power source	20
Configuration	21
Accessing the system's Control Panel	22
Getting acquainted with the Control Panel	23
The User interface	23
Dashboard	24
Settings	25
Basic configuration of your system	25
Temperature threshold settings	25
Control Temperature Sensor selection	26
Renaming a Control Unit or Sensor	27
Operational capabilities	28
Manually switching the system's mode of operation	28
Monitoring the system's data and status via the Control Panel	28
Sending a command to the Control Unit via the Control Panel	29
Downloading log files via the Control Panel	30
The MyFrolight platform	31
Registration of the Control Unit	32
Maintenance and cleaning	33
Control Units	33
IR tubes	33
Sensors	34
End of life	34
Technical specifications	34
Control Unit	34

IR tubes 35

Troubleshooting and support 36

Liability 36

Copyright information37

General safety warnings & precautions

Please read this manual carefully.

Contact your point of sales if you have any questions.



This product is intended for professional use only. It should not be operated by untrained individuals or children under the age of 12. To prevent the risk of electrocution and injury, children should always be kept at a safe distance from the system.



This product is designed for outdoor use only. Using this device indoors or in enclosed spaces can lead to serious damage, injury, or fire.



This product uses electrical power and three-phase voltage

Always turn off and disconnect the Control Unit from the power source before installing or uninstalling or performing any work inside the unit. Ensure that Q1 is also switched off when working inside the control unit.

Always turn off and disconnect the Control Unit from the power source before connecting any IR tubes or extension cables.

Do not dismantle the Control Unit or IR tubes. Make sure that the power supply voltage has been correctly measured by an electrician before connecting the control unit.

If a generator is used, make sure that the grounding has been properly installed and connected.



Prior to connection to the power supply, ensure that the control unit enclosure is secured with the key

Safely handle IR tubes

Always turn off and disconnect the Control Unit from the power source before installing or uninstalling.

Always turn off and disconnect the Control Unit from the power source before connecting any IR tubes or extension cables.

Do not dismantle the Control Unit or IR tubes. Make sure that the power supply voltage has been correctly measured by an electrician before connecting the control unit to it. If a generator is used, make sure that the grounding has been properly installed and connected.

When the control unit is powered, always maintain a minimum distance of 2 m from the control unit and the IR tubes.

Even though the Frolight system has a long and proven track record, it is important to note that extreme weather conditions can still occur. In such exceptional circumstances, these conditions may negatively affect the system's performance to a degree that crop damage may still happen. While Frolight significantly reduces the risk of frost damage, no system can fully eliminate the impact of rare and severe weather events.



Failure to adhere to any of these guidelines could result in death or serious injury and may also void the warranty

Technical Details

DECLARATION OF CONFORMITY

The Supplier provides the Goods in conformity with the relevant European Union safety and quality standards and guarantees compliance with applicable EU legislation, including CE marking. The Customer shall be fully responsible for ensuring additional compliance with all applicable laws, regulations, standards, and certification requirements in the destination country. This includes, but is not limited to, national and regional safety standards, electrical and fire-safety regulations, environmental requirements, installation standards, and any mandatory product certifications (such as UL certification in the United States, CSA in Canada, UKCA in the United Kingdom, or any other equivalent certification applicable in the Customer's jurisdiction). The Seller shall not be held liable for any consequences resulting from the Customer's failure to comply with such requirements. It is the sole responsibility of the Customer to verify, obtain, and maintain any additional certifications, approvals, or permits required for the import, installation, or use of the Goods in the destination country.

MACHINERY DIRECTIVE 2006/42/EC

Based on the characteristics of the system, it can be concluded that the Machinery Directive does not apply, as the system does not fall within any of the categories covered by the Machinery Directive.

LOW VOLTAGE DIRECTIVE 2014/35/EU

EMC DIRECTIVE 2014/30/EU

ROHS DIRECTIVE 2011/65/EU AND DELEGATED DIRECTIVE (EU) 2015/863

RADIO EQUIPMENT DIRECTIVE (RED) 2014/53/EU

HARMONISED AND/OR TECHNICAL STANDARDS

EN 61326-1:2020 (1) Electrical equipment for measurement, control and laboratory use — EMC requirements — Part 1: General requirements

EN 55011:2016/A11:2020 Industrial, scientific and medical equipment (ISM equipment) — Radio-frequency disturbance characteristics — Limits and methods of measurement

EN 61000-3-2:2014 Electromagnetic compatibility (EMC) — Part 3-2: Limits — Limits for harmonic current emissions (equipment input current ≤ 16 A per phase)

EN 61000-3-3:2013 Electromagnetic compatibility (EMC) — Part 3-3: Limits — Limitation of voltage changes, voltage fluctuations and flicker in public

low-voltage supply systems, for equipment with rated current ≤ 16 A per phase and not subject to conditional connection (2)

EN 60335-1:2012/A15:2021 Household and similar electrical appliances — Safety — Part 1: General requirements

EN 63000:2018 Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances (2)

EMC environment & installation constraints

- **Intended environment: light industrial environment** (CENELEC definition). 2022, 11494-TR-01
- **Emission class: IEC/EN 55011 Class A** 2022, 11494-TR-01
- **Immunity test levels (to document expectations/robustness):**
 - ESD: ± 4 kV contact, ± 8 kV air
 - EFT: ± 2 kV on AC mains, ± 0.5 kV on I/O lines
 - Surge: ± 1 kV differential, ± 2 kV asymmetric
 - Conducted & radiated immunity: **10 VEMF, 0.15 MHz – 3000 MHz (modulated)**
 - Mains interrupt: **100% for 10 (20) ms**
 - 2022, 11494-TR-01

Product overview


SOLUTION OVERVIEW

The Frolight system protects your plants from spring frost damage by radiating infrared light onto the plants. This infrared light comes from IR tubes. These IR tubes are installed close to the plants.

The IR tubes are connected to and controlled by the Control Units (FLGCU-A & FLGCU-B), which act as the brain of the system.

The Master Control Unit is required for every Frolight installation. Additional Slave Control Units can be added to protect a larger area on your location. Configuration and monitoring is done via the Master Control Unit. The Master Control Unit communicates with the Slave Control Units wirelessly over radio signals.

Below is a schematic overview of a Frolight setup with 1 Master Control Unit and 2 Slave Control Units protecting 36 rows.

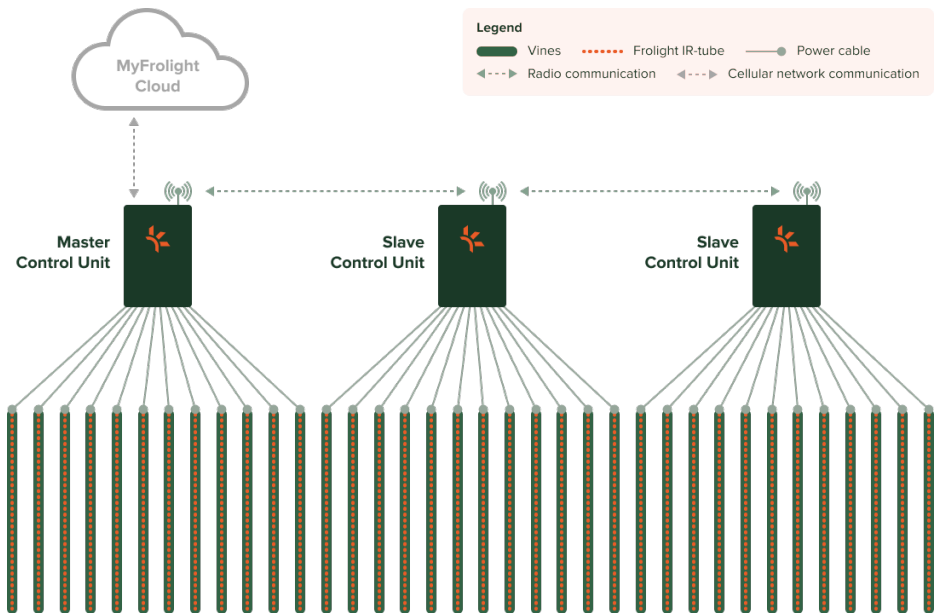

The Frolight system is intended to be used on a single location. Do not install multiple Master Control Units on the same location. Always use Slave Control Units to extend a system's reach.

However, if you have multiple locations to protect, you should set up a Frolight installation with at least a Master Control Unit per location.

PARTS

A minimal Frolight setup includes the following components:

	<p>Master Control Unit (FLGCU-A)</p> <p>The brain of the system, this smart electrical unit connects to the IR tubes.</p> <p>The master control unit is mounted onto a metal base.</p> <p>This unit also handles the connection with the MyFrolight web platform.</p>
---	--



IR tubes (FLH-MXXX)

These infrared light tubes are the workhorses of the Frolight system. IR tubes come on a reel that can be unrolled in the field. They come in varying lengths, from 25 to 150 metres.

The following optional components can be added to extend the system:

A green rectangular control unit with a black handle on top, mounted on an orange tripod stand. A black cable is connected to the side of the unit.	<p>Slave Control Unit (FLGCU-B)</p> <p>If the field's area that must be protected is too large for a single control unit, one slave control unit must be added per extra 1200 meters of IR tube.</p> <p>The slave control unit is very similar to the master control unit. However, it receives its settings from the master control unit and it does not contain a USB dongle with a SIM card. MyFrolight connectivity is handled by the master control unit. Master and slave control units can be visually distinguished by respectively a green (master) and blue (slave) indicator label.</p>
A coiled black cable with connectors at both ends.	<p>Extension Cable (FLACTB-MXXX)</p> <p>An IR tube has 10 meters of power cable to reach the control unit. If this is not sufficient, an extension cable can be used to extend the length with an extra 5 to 100 meters.</p>



Power Cable Splitter (FLACTB-SP01)

If you need to connect more than 12 IR tubes to a control unit, a splitter can be used to turn one connection into two new connections.

Please be aware that use of this option is limited and to not connect more than 1200 meters per control unit.



Extra Sensor & Cable (FLACTS2-M50)

A second Temperature Sensor can be added to measure and keep track of the temperature at two different locations. This can come with an additional cable of between 1 to 50 meters.



Tube Reel Trolley (FLATRA)

To ease unrolling the IR tubes, they can be placed on the tube reel trolley.



Fix Winder (FLAFW)

Hydraulic system to easily wind & unwind Frolight tubes.

Can be used with the the standard metal spools or with big plastic spools than can wind up to 600 meters of Frolight

Installation

This chapter will guide you through the process of installing your Frolight system. Please read through the instructions carefully before beginning the installation process to ensure a smooth and successful setup. In this chapter, we will cover the following:

- Unpacking and verifying the components of your system
- Preparing your environment for installation
- Step-by-step instructions for installing.

Before you begin, please make sure that you have all necessary tools and equipment to complete the installation. Once you have read through the instructions and prepared your environment, you can begin the installation process with confidence.

UNPACKING AND VERIFYING THE COMPONENTS OF YOUR SYSTEM


Before beginning the installation process, it is important to first unpack and verify the contents of your package. This section will guide you through the process of unpacking your package, identifying the components included in your system, and verifying that you have received all the necessary components. Additionally, please verify that none of the goods were damaged during shipping. By following these instructions, you can ensure that you have all the necessary components to complete the installation process and that your system is fully operational.

Frolight Control Units

The Frolight Master Control Unit can be identified by the serial number, which is printed on the sticker you can find on the bottom of the left side of the unit. Serial numbers like FLGCUA-XXXX.XXXX.XXXX identify Master Control Units, while serial numbers like FLGCUB-XXXX.XXXX.XXXX identify Slave Control Units.



Apart from this, a plaque with a green or blue border can be found on the right side of each unit. A green border identifies Master Control Units, while a blue border identifies Slave Control Units.

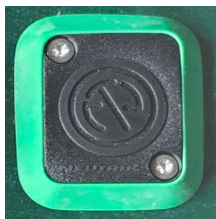


The plaque with a green border
on a Master Control Unit



The plaque with a blue border
on a Slave Control Unit

Each Control Unit also comes with a coated steel mount and 5 M8x20 bolts, 5 M8 nuts and 5 A 8.4 washers.

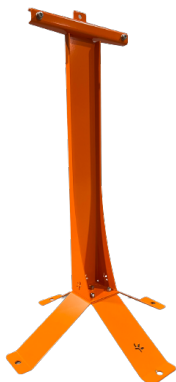

Frolight IR tubes

The IR tubes are shipped on a drum. They consist out of the actual IR tube and 10 meters of electric cable with plug.



Please inspect the IR tubes for any damage before installing.

Installation schema

Your point of sales should have provided you with an installation schema for your plot. For a successful installation, we recommend you adhere to this schema.

PREPARING YOUR ENVIRONMENT FOR INSTALLATION

We advise you to only install the Frolight system after winter pruning of the vines has happened. This will prevent damaging your system during pruning.

STEP-BY-STEP INSTRUCTIONS FOR INSTALLING

This section will provide detailed instructions for installing your system. By following these step-by-step instructions, you can ensure a smooth and successful installation. In this section, we will cover the following steps:

1. Installing the Control Units
2. Installing the IR tubes
3. Connecting the IR tubes to the control units
4. Plugging in and starting the control units

Please ensure that you have read and understand all the previous sections before proceeding with the installation process. Also make sure to have all necessary tools and equipment ready and read through each step carefully before proceeding to the next.



Warning: Make sure that the Control Units are not connected to a power source during installation. Failing to do so might damage the system or even result in heavy personal injury or death due to electrocution.

Required tools and equipment.

- Max Tapener HT-R1 (FLAMT-HTR1)
- Max Staples (FLAMPT-ST01)
- Max Bio-Tape (FLAMT-TB01-Green)
- 6mm Allen key
- 13mm hex nut driver or hex spanner
- Protective gloves (when using a FIX-Winder)

Installing the Control Units

BEFORE INSTALLING



Always turn off or disconnect the Control Unit from the power source before installing or uninstalling.




ASSEMBLING THE MOUNT

PARTS REQUIRED

- 3x M8x20 bolt, 3x M8 nut 3x A 8.4 washer

INSTRUCTIONS

To assemble the mount, place both feet on top of each other in a perpendicular way, so that the three holes align correctly. Note that the foot with the Frolight logo cut out should be the bottom foot. Next, place the large holder on top of the feet, in such a way that the holes in the bottom align with the three holes in the feet. To attach the holder to the feet, insert a bolt through each hole from the top, then use the Allen key and hex nut driver or hex spanner to tighten the nuts onto the bolts from the bottom. Do not forget to place a washer between the nut and the bottom side of the feet. (See detail B)

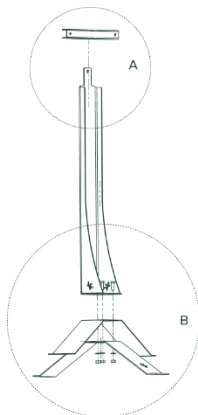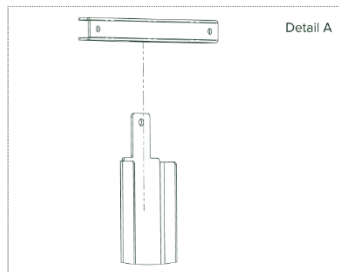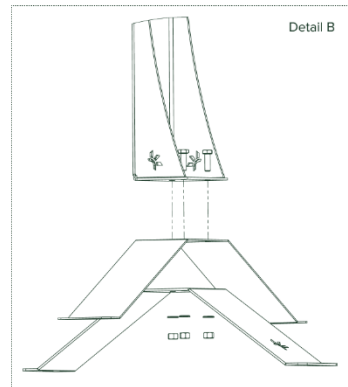

Lastly, slide the Control Unit attachment bracket over the lip (see detail A) at the top of the holder, so that the closed side points to the front of the mount (the side where the Frolight logo is visible on the feet).

You are now ready to attach the Control Unit to its mount.

ATTACHING THE CONTROL UNIT TO THE MOUNT

PARTS REQUIRED

- 2x M8x20 bolt
- 2x M8 nut
- 2x A 8.4 washer


- 6mm Allen key
- 13mm hex nut driver

INSTRUCTIONS

The Control Unit should be mounted to the Control Unit attachment bracket, so that the front side of the Control Unit is facing the front side of the mount (where the Frolight logo is visible on the feet of the mount).



To mount the Control Unit, open it first. Notice the two holes (marked below as A and B). These are the holes where the bolts should be threaded through. Insert the bolts (with washers) through the back of the attachment bracket and slide the unit over the bolts. Next, screw on a nut on each of the two bolts using the Allen key and the hex nut driver. Be careful not to overtighten the nuts to prevent damaging the Control Unit's casing.

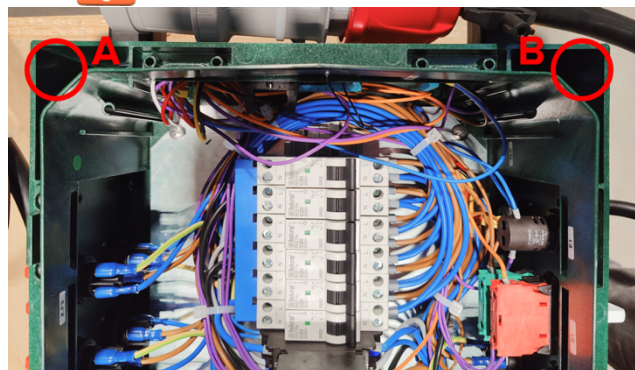

POSITIONING THE CONTROL UNIT

You can now position your Frolight Control Unit as defined in the installation schema provided to you by your point of sales.

Securely anchor the Control Unit to the ground by using the four holes located in the feet of the mount. Tent pegs or comparable items can be inserted through these holes to keep the unit firmly in place.

CONNECTING A SECOND SENSOR TO THE CONTROL UNIT

An additional sensor can be connected to the Control Unit, assuming the sensor has a 3-pin male XLR connector.



To connect the sensor, remove the cap from the unit's 3-pin XLR chassis and securely insert the sensor's male connector into the unit's plug.

INSTALLING ADDITIONAL CONTROL UNITS

If your installation has more than 1 Control Unit, the above steps can be followed for installing the additional (Slave) Control Units.

Please note that a Control Unit should always be positioned at a maximum distance of 100 meter from another Control Unit. That way, the Control Units can create a so-called *mesh network* and communicate with each other.

Installing the IR tubes

BEFORE INSTALLING

For the Frolight IR tubes to work optimally, they should be installed in the plant area at the level of the root stocks where the new shoots will emerge. To ensure optimal operation, place them at a distance of 3 to 10 cm from the root stock that should be protected.



When handling the IR tubes, never pull on the electrical cable part, this might damage them.



Always fully unwind IR tubes from their drums before connecting them. If you leave them coiled, this can cause serious damage and injury.




Keep all cables off the ground to prevent damage and injury.



DO NOT BEND IR-TUBES MORE THAN THE ANGLE OF A CIRCLE WITH A 30 CM RADIUS

IR-TUBE BENDING

When bending a IR tube, look at the wires inside and make sure they are positioned above each other, not next to each other to prevent damaging them.

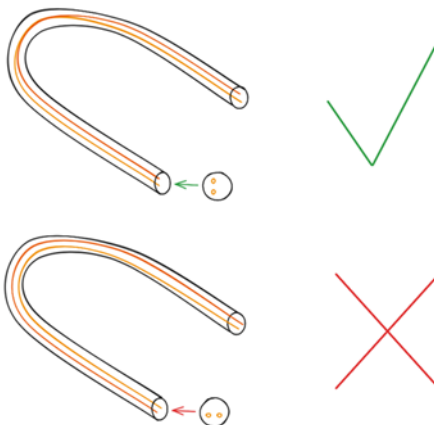

INSTALLATION STEPS

1. Unwind the reels between two rows of vines where they will be installed. Make sure to completely unwind the reels. Ensure that you start unwinding from the side which is the furthest away from the Control Unit, and move towards the Control Unit. This will ensure that the electrical cable is on the side of the Control Unit.
2. Take the IR tube in your hand and place it between 3 to 10 cm from the graft, branch or root stock to protect.
3. Fasten the IR tube using the Max Tapener HT-R1 pliers.
4. Ensure that the connecting cable ends at the side of the already positioned Control Unit. You may require additional Frolight extension cables and Frolight power cable splitters (see [Product overview > Parts](#)) to reach the Control Unit.



Connecting the IR tubes to the Control Units

Now that the Control Units are positioned and the IR tubes have been installed, it is time to connect the IR tubes to the Control Units.

BEFORE CONNECTING



Never connect more than 450m of IR tube to a group of connections (groups 1, 2 and 3).



Never connect more than 150m of IR tube to a single connection (connections 1.1 – 1.4, 2.1 – 2.4, 3.1 – 3.4).



Always turn off and disconnect the Control Unit from the power source before connecting any IR tubes or extension cables.



If any part of a plug or connector is damaged, it must be replaced immediately.

CONNECTION STEPS

1. Turn off the differential fuse (DIFF) on the Control Unit.
2. Connect all IR tubes to the correct Control Unit (please refer to the installation schema provided by your point of sales). Please refer to the stickers on the box to identify the correct connection.
 - a. Insert the plug with the clip on the top left into the connector.

- b. Lock the plug by twisting it to the right until you hear a 'clicking' sound.



Connecting the Control Units to the power source




Make sure that the power supply voltage has been correctly measured by an electrician before connecting the control unit.




If a generator is used, make sure that the **grounding** has been properly installed and connected.

1. Switch on the Control Unit by switching on all fuses (F2 to F8) and the differential switch (F1).

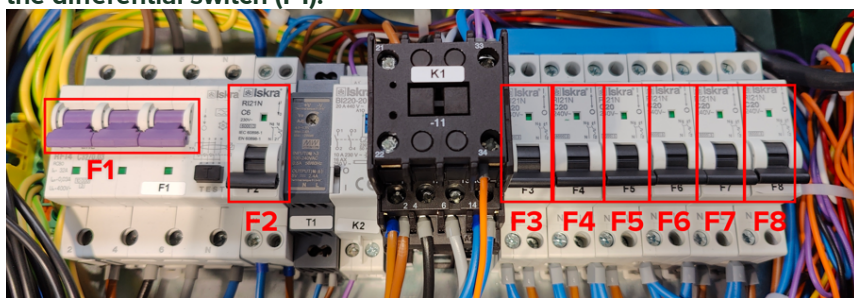

2. Close and lock the lid of the control unit.

3. Connect the Control Unit to the power supply by connecting the unit's power cable to the power source.

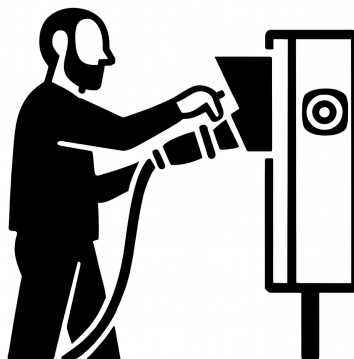

After a maximum of 2 minutes, the indicator lamp will remain on and blink every 30 seconds. This indicates that the system is now operational.

When powering a Slave Control Unit, it will automatically connect with the Master Control Unit. A few minutes after starting up, the Slave Control Unit and its sensors will appear in the Control Panel.


Configuration

This chapter will guide you through the process of configuring your Frolight system. Please read through the instructions carefully before beginning the configuration process to ensure a smooth and successful setup. In this chapter, we will cover the following:

- The Control Panel
- Accessing the system's Control Panel
- Getting acquainted with the Control Panel
- Basic configuration of your system.

Once you have read through these instructions, you can begin the configuration process with confidence.

The system can be configured by accessing the Master Control Unit's *Control Panel*. This Control Panel is a web interface, through which you can view and change the system's settings and follow up on the status and performance of your system.

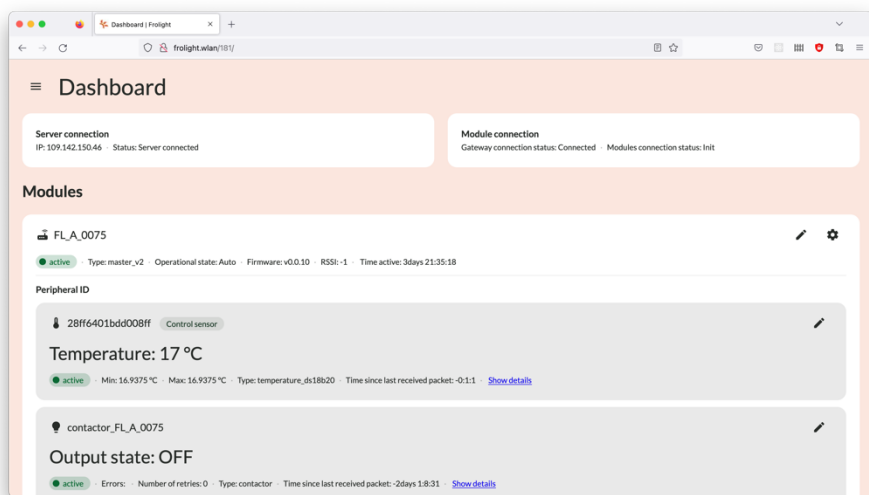


ACCESSING THE SYSTEM'S CONTROL PANEL

To access the Control Panel, you need a device (such as a smartphone, tablet or laptop) with Wi-Fi capabilities and a recent web browser (e.g. Google Chrome, Mozilla Firefox, Microsoft Edge, Safari,...) installed.

1. First, make sure you are well in range of your installation's Master Control Unit (within 50 meters).
2. Open your device's wireless network settings.
3. Connect to the Wi-Fi network named `FLGCU-A-XXX` (where `XXX` equals the last 3 digits of your Master Control Unit's serial number).
4. Your device will prompt for a password. The Wi-Fi password to use is `frolightpwd` (case-sensitive).
5. Once connected, open a web browser and browse to <http://frolight.wlan>. Please make sure to enter the exact URL (including `http://`) in the browser's address bar. You should now

see a the Control Panel's *Sign In* screen.

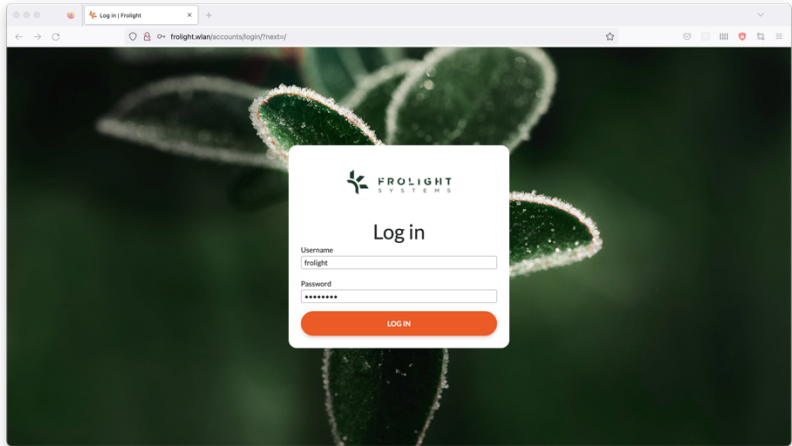


6. Sign in using `frolight` as username, and `pwd12345` as password. Both are case-sensitive.

You are now signed in to the Control Panel of the Master Control Unit.

GETTING ACQUAINTED WITH THE CONTROL PANEL

The User interface

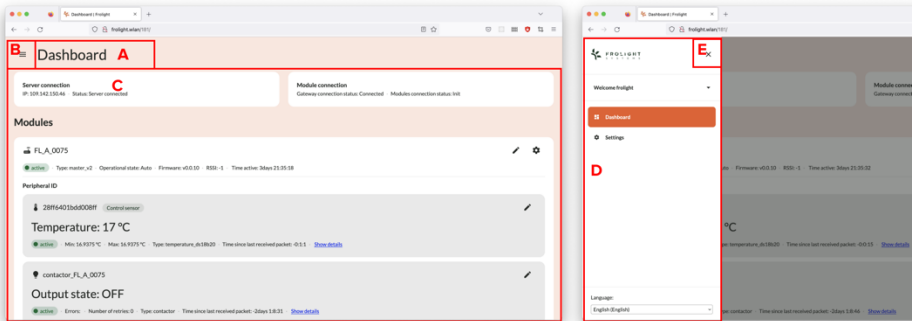


The user interface consists of three primary elements:

- **The current page's title (A)**
This shows you which page you are currently viewing.
- **The navigation button (B) & drawer (D)**
The navigation drawer allows you to navigate from the Dashboard page to the Settings page and vice versa. It also allows you to sign out and to change the language of the user interface.

- The page content (C)
This contains the content of the current page.

Clicking the *Navigation* icon (B) in the top-left corner of the screen opens the navigation drawer (D). To close the drawer again, you can click the *Close* icon (E) in the top right corner of the navigation drawer.


Dashboard

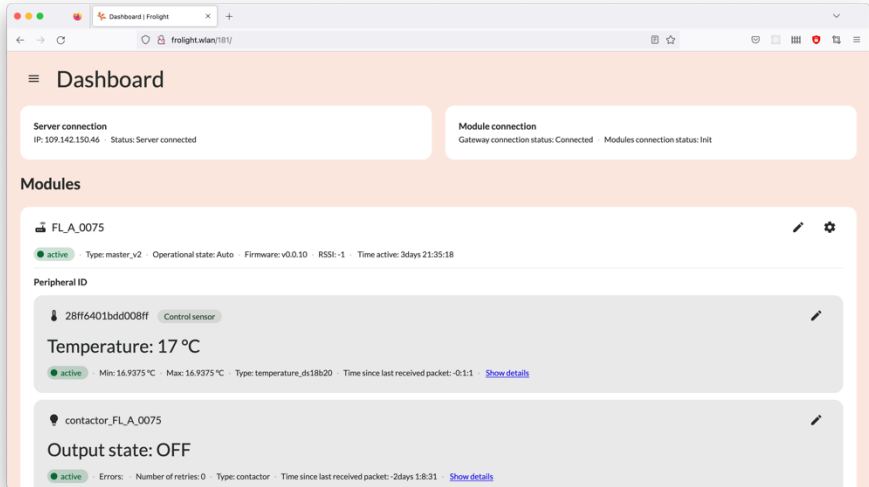

The first page you see after signing in, is the Control Panel's *Dashboard* page, here you can see an overview of all the Control Units, the temperature readings from their sensors and the state of the heating system (IR tubes).

Note: When the contactor's *Output state* is set to *OFF*, the IR tubes are not active. This is because the measured temperature is above the configured threshold temperature value.

Settings

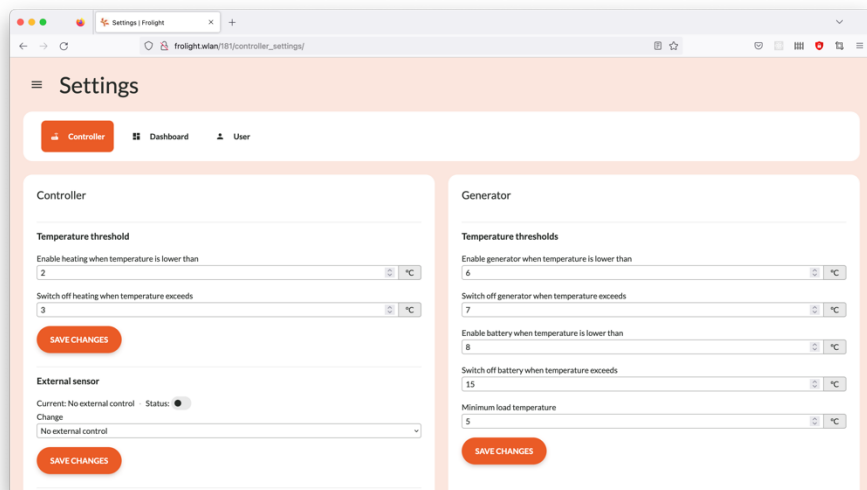

The *Settings* page has 3 tabs, shown under the current page's title:

- ***Controller***
This tab shows all operational settings related to your Frolight installation, such as the temperature thresholds for the heating, Control Temperature Sensor selection, etc...
- ***Dashboard***
All settings related to the Dashboard page.
- ***User***
This tab contains all settings related to the user. Here you can change your password.

BASIC CONFIGURATION OF YOUR SYSTEM

The Frolight system comes pre-configured with optimal settings, but you may wish to adjust certain defaults to better suit the unique needs of your field. This section highlights the essential customization options, enabling you to fine-tune the system to perfectly fit your requirements.


Temperature threshold settings

The Frolight system comes with pre-configured temperature threshold settings that automatically activate the IR tubes when the temperature drops below 3°C to provide heat to the vines, and deactivate when the temperature rises above 4°C again. We strongly recommend not lower the activation

temperature below 3°C, as it could affect the proper functioning of the Frolight system.

Access the Control Panel (see [Configuration > Accessing the system's Control Panel](#))

1. Navigate to the *Settings* page
2. Ensure you are on the *Controller* tab
3. In the *Controller* panel, locate the section labeled *Temperature threshold* and adjust the values for the activation and deactivation temperatures
4. Click the *Save changes* button located beneath the 2 input fields
5. Confirm the changes in the dialog that appears

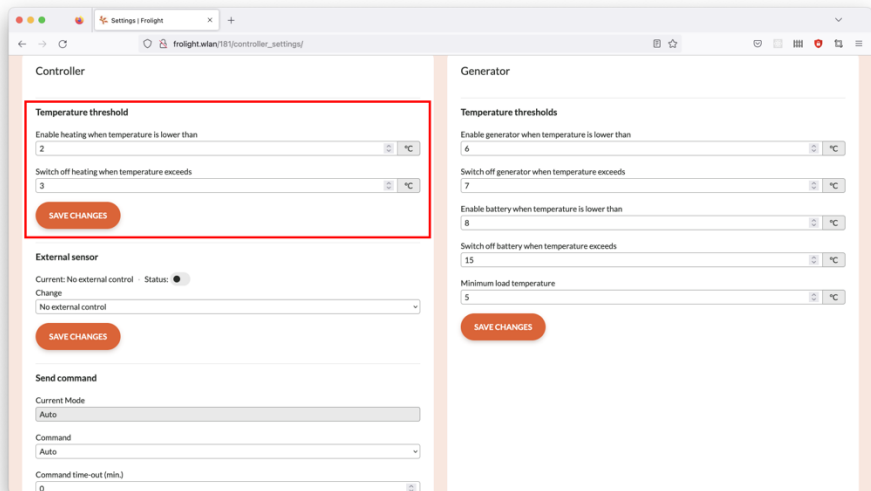


Please note: To prevent the system from frequently toggling the IR tubes on and off, there should be a minimum difference of 1°C between the lower and upper threshold temperatures.

Control Temperature Sensor selection

When multiple Temperature Sensors are connected to the Master Control Unit, you can specify which sensor will be used as the Control Temperature Sensor to which the heating system responds. Either the default sensor, or an external Temperature Sensor as the Control Temperature Sensor, please follow these steps:

1. Access the Control Panel (see [Configuration > Accessing the system's Control Panel](#))
2. Ensure you are on the *Dashboard* page


3. Locate the panel for the Control Unit for which you want to change the Control Temperature Sensor
4. Click the *Settings* icon located in the top-right corner of the panel
5. Locate the panel labeled *Temperature threshold*
6. Locate the field labeled *Control temperature Rom ID*
7. In the *Change* field, select the ID of the sensor you want to use as the unit's control temperature sensor
8. Click the *Save changes* button located beneath this field

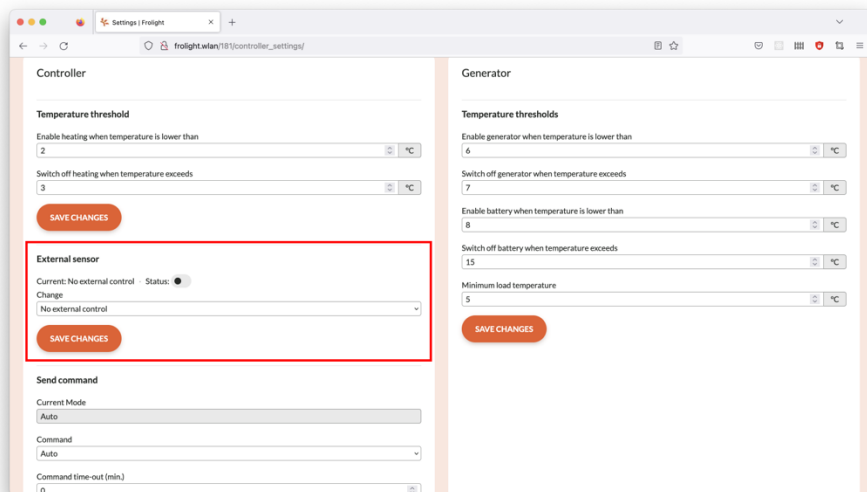

Renaming a Control Unit or Sensor

If you want to change the display name of a Control Unit or Sensor, you can do so following these steps:

1. Access the Control Panel (see [Configuration > Accessing the system's Control Panel](#))
2. Ensure you are on the *Dashboard* page
3. Locate the Control Unit or Sensor you want to rename
4. Click the *Pencil* icon located to the right of the display name of the Control Unit or Sensor
5. Enter the new name for the Control Unit or Sensor
6. Click the *Disk* icon located to the right of the input field to save your changes.

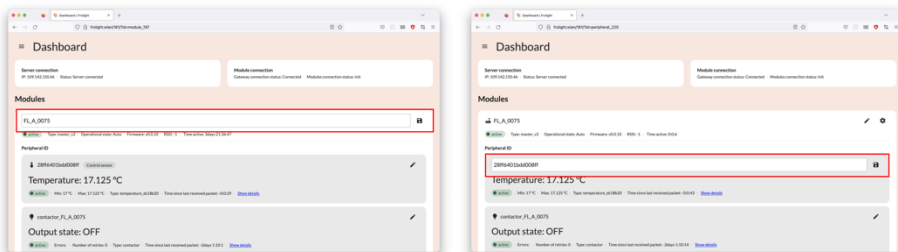

Operational capabilities

This chapter will provide you an overview of the various features and capabilities of the Control Panel. It is important to read through these instructions carefully to ensure you are getting the most out of your system.


MANUALLY SWITCHING THE SYSTEM'S MODE OF OPERATION

To manually activate the IR tubes for a specific Control Unit, you can turn the hardware switch 90°. When set to *Manual*, the Control Unit will activate its connected IR tubes regardless of the temperature, until the mode is manually changed to *Auto* again via the hardware switch. This overrides the mode of operation you can configure via the Control Panel (see [Operational capabilities > Sending a command to the Control Unit via the Control Panel](#)).

MONITORING THE SYSTEM'S DATA AND STATUS VIA THE CONTROL PANEL

The Control Panel allows you to closely monitor multiple data points, such as the currently measured temperature, heating activation status and more. To view this data in a visual format, you can follow these steps:


1. Access the Control Panel (see [Configuration > Accessing the system's Control Panel](#))
2. Ensure you are on the *Dashboard* page
3. Locate the sensor for which you would like to see the data and click the *Show all* link located below the sensor's current temperature value
4. You will now be able to see a chart visualizing the data for the past 7 days
5. To change the number of days for which the data is shown in the chart, enter a different number of days in the input field located on the top right of the chart, and then click the *Apply* button next to it
6. You can navigate through different time ranges by using the arrow buttons (< and >) located on the top right of the chart

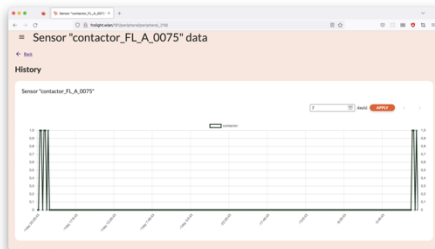

SENDING A COMMAND TO THE CONTROL UNIT VIA THE CONTROL PANEL

In certain situations, you may want to manually override the automatic operation of the system and activate the heating for a specific duration. This can be done by sending a manual command to the Control Units. To do this, follow these steps:


1. Access the Control Panel (see [Configuration > Accessing the system's Control Panel](#))
2. Navigate to the *Settings* page
3. Ensure you are on the *Controller* tab
4. In the *Controller* panel, locate the section labeled *Send command*
5. In the *Command* field, select the command you wish to send to the Control Units
 - a. *Auto*
Enables automatic operation mode (the system will decide when to turn the heating on or off)
 - b. *Always on*
This will manually activate the IR tubes for a given amount of time
6. When sending the *Always on* command, the value in the *Command time out (Min.)* field specifies the time in minutes for which the system will operate in this mode before automatically switching back to *Auto* mode
7. Click the *Send command* button located below the fields
8. Confirm the changes in the dialog that appears

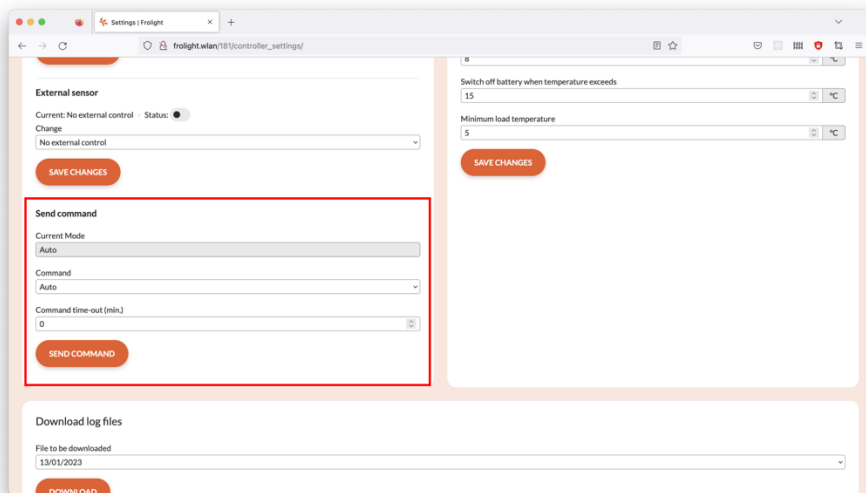


DOWNLOADING LOG FILES VIA THE CONTROL PANEL

To archive data or troubleshoot using data from the system, you may wish to download and save a log of the data of a specific day. This can be done by following these steps:

1. Access the Control Panel (see [Configuration > Accessing the system's Control Panel](#))
2. Navigate to the *Settings* page
3. Ensure you are on the *Controller* tab
4. Locate the panel labeled *Download log files*
5. In the *File to be downloaded* field, select the log file you wish to download
6. Click the *Download* button located below the field

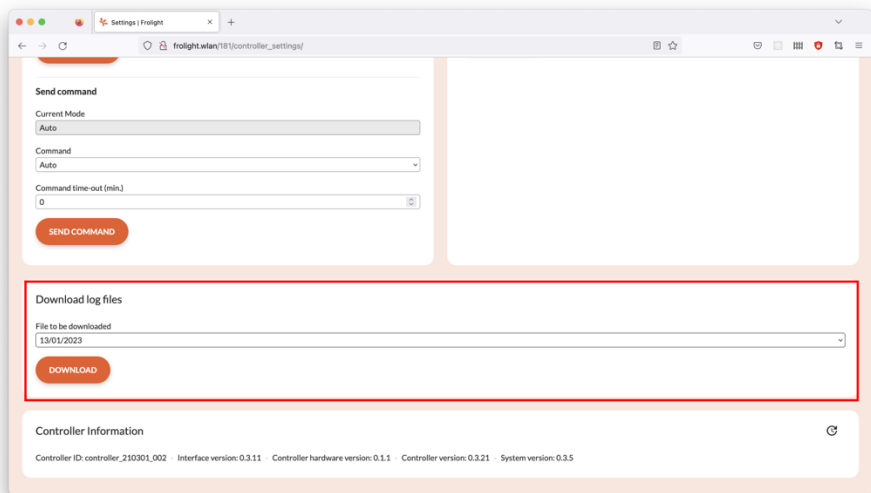

THE MYFROLIGHT PLATFORM

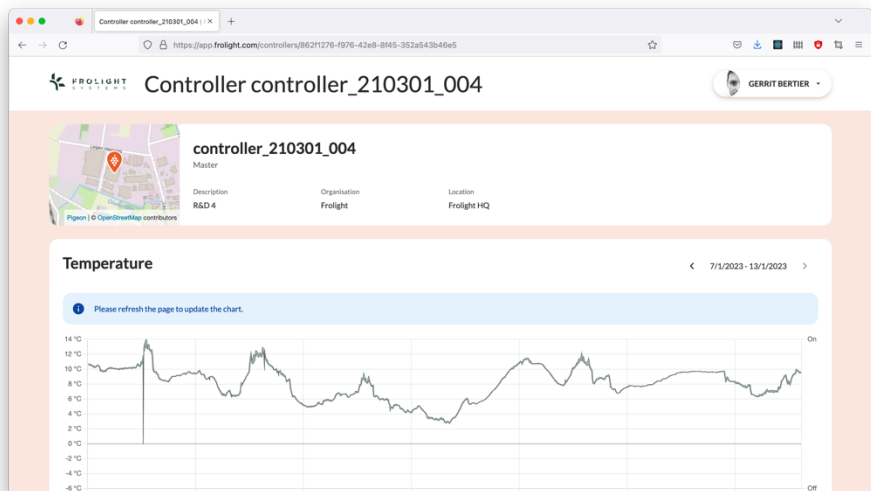

MyFrolight is a web platform through which you can remotely monitor your installation over the internet.

The use of the MyFrolight platform is documented separately in the “Connecting a Frolight installation to MyFrolight” manual.

REGISTRATION OF THE CONTROL UNIT

It is essential to register your Frolight control unit to receive proper **support**. Each unit contains a **SIM card** that transmits data to our servers. This data also includes important technical information required for diagnostics, system monitoring, and effective customer assistance.

Without registration, our support team may not be able to access the necessary data to provide reliable and timely help.

Maintenance and cleaning

Regular maintenance and cleaning of the Frolight system is crucial to ensure optimal performance and longevity of the products. This chapter will provide detailed instructions on how to properly maintain and clean the various components of the system. By following these guidelines, you can ensure that your system is running at peak efficiency and reduce the risk of equipment failure. It is important to note that maintenance should be performed as needed, based on environmental conditions and usage.

CONTROL UNITS

- Regularly inspect the Control Units for any damage.
- Clean the Control Units at least once per season using a clean damp cloth or sponge.
- At least once per year, before installing
 - o please ensure all cable glands on the IR control units are sufficiently tightened.
 - 10 Nm for the large cable gland with the power cable
 - 6 Nm for the small cable gland with the temperature sensor
 - o please ensure all screws (inside & outside the IR control unit) are correctly tightened.



Before cleaning, ensure that the Control Unit is disconnected from its power source.

IR TUBES

- Regularly perform a visual inspection off the IR tubes to check for cracks or tears.
- It's also recommended to clean the IR tubes at least once per season using a clean wet cloth or sponge, preferably right before storing them.

When rolling up the IR-tubes for storage. Its recommended that you follow the direction that the IR-tube wants to bend in. The two power traces (the two wires that run through the tube) should always be closest to the spool.



Before cleaning, ensure that the Control Unit controlling the IR tube is disconnected from its power source, or that the IR tube itself is disconnected from any Control Unit.

SENSORS

Regularly clean the Temperature Sensors with a clean damp cloth or sponge to ensure that they can provide accurate temperature readings.

End of life



Frolight wants to actively help to a greener world.

When parts of the installation reach their end of life, do not throw them away, as they might damage the environment. Please bring them back to your salespoint, distributor or Frolight HQ. They will be 98% recycled.

Technical specifications

CONTROL UNIT

Power supply	1 x CEE Male 32A 5p400V
Nominal Voltage	3 x 400V + N
Current	max. 32A per phase

Power supply	max. 20 kW
Operation modes	Manual Temperature controlled Other Frolight Control Unit (master/slave)
Control	Via web interface (Control Panel) Via web interface (MyFrolight platform)
Water resistance	IP65
IR tubes per control U	max. 1200m
IR tube connection	Waterproof connectors (IP67)
External connection	Via cellular network (3G/4G)

IR TUBES

Available IR tube lengths	25m, 50m, 75m, 100m, 125m, 150m
Installed power cable	10m
Connection	Waterproof connectors (IP67)

This technical data sheet is subject to change without prior notice. For the most recent version, please visit our website www.frolight.com.

Troubleshooting and support

Issue	No data is visible on the MyFrolight platform.
Solution	Ensure that the Master Control Unit has a operational SIM card installed, and is located in an area with sufficient cellular network reception.

Issue	The IR tubes are on, even though the measured temperature is above the configured threshold value.
Solution	Ensure that the hardware switch is not in the <i>manual</i> position, but in the <i>automatic</i> position. Verify via the Control Panel that the operational mode is set to <i>Auto</i> , and not <i>Always on</i> . If required, send the <i>Auto</i> command as described earlier in this manual.

Issue	One or more sections of an IR tube do not work.
Solution	The IR tubes can be repaired per meter. Contact your point of sales for more information.

Issue	When connecting a dry temperature sensor and a wet bulb temperature sensor to the Control Unit, there might be instances where the wet bulb temperature reads higher than the dry temperature, and the relative humidity exceeds 100%.
Solution	To address this, position both temperature sensors in close proximity to minimize potential differences based on their locations. Additionally, make sure the wet bulb sensor's sleeve remains adequately moist, and the water reservoir is filled. Although minor sensor discrepancies may persist, they should not affect the overall functionality of your Frolight system.

Should you encounter any other problems with the installation or parts thereof, please contact your point of sales as soon as possible.

Liability

When purchasing Frolight, you agreed with our terms & conditions, may we remind you of the following important paragraph 'Article 8 in our terms & conditions)

References to liability in this Paragraph include every kind of liability arising under or in connection with the Contract including liability in contract, tort (including negligence), misrepresentation, restitution or otherwise.

Nothing in the Contract excludes or limits any liability which cannot legally be excluded or limited, including liability for (a) death or personal injury caused by fault; (b) fraud or fraudulent misrepresentation; or (c) deliberate default. the Supplier's total liability to the Customer under the Contract shall not exceed ten (10) % of the total sums effectively paid by the Customer under the Contract.

The following types of loss are wholly excluded (a) loss of profits; (b) loss of sales or business; (c) loss of agreements or contracts; (d) loss of anticipated savings; (e) loss of use or corruption of software, data or information; (f) loss of or damage to goodwill; (g) damage to property; and (h) indirect or consequential loss. The Customer agrees, and accepts, not to hold the directors, employees, service providers, consultants and advisers of the Supplier personally liable for or in connection with the Contract. Any (liability) claim for or in connection with the Contract (including any extracontractual liability claim) shall be brought by the Customer solely against the Supplier.

Copyright information

Frolight BV holds the copyright to this manual. All rights reserved worldwide. This manual or parts thereof may not be reproduced, copied, translated, edited or stored in any electronic medium without the prior written consent of the copyright holder.

